

1. The viewing angle of plasma can be adjusted by loosen or tighten X-1.
2. The viewing horizontal level of plasma can be adjusted by loosen or tighten X-2.

